




GB INSTALLATION SHEET


Minimum height above cooker: 65 cm (electric cookers), 75 cm (gas, gas oil or coal cookers)

F FICHE D'INSTALLATION

Distance minimale par rapport à la cuisinière : 65 cm (cuisinière électrique), 75 cm (cuisinière à gaz, mazout ou charbon)

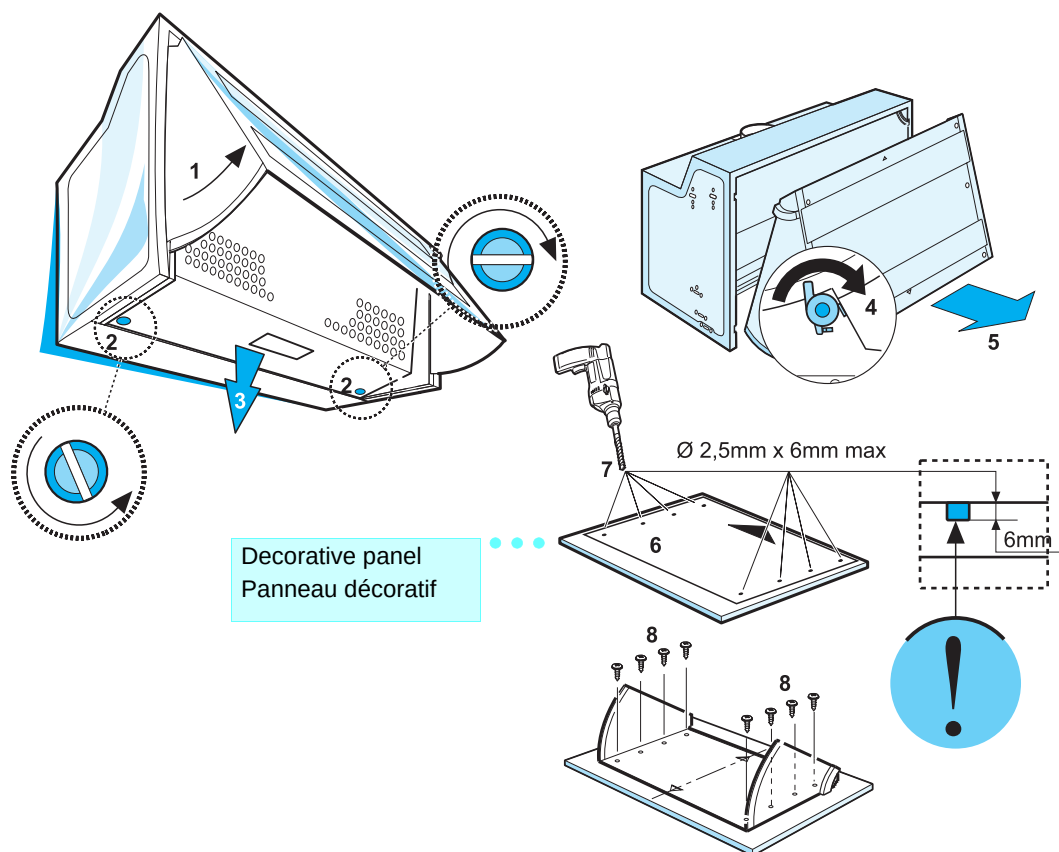

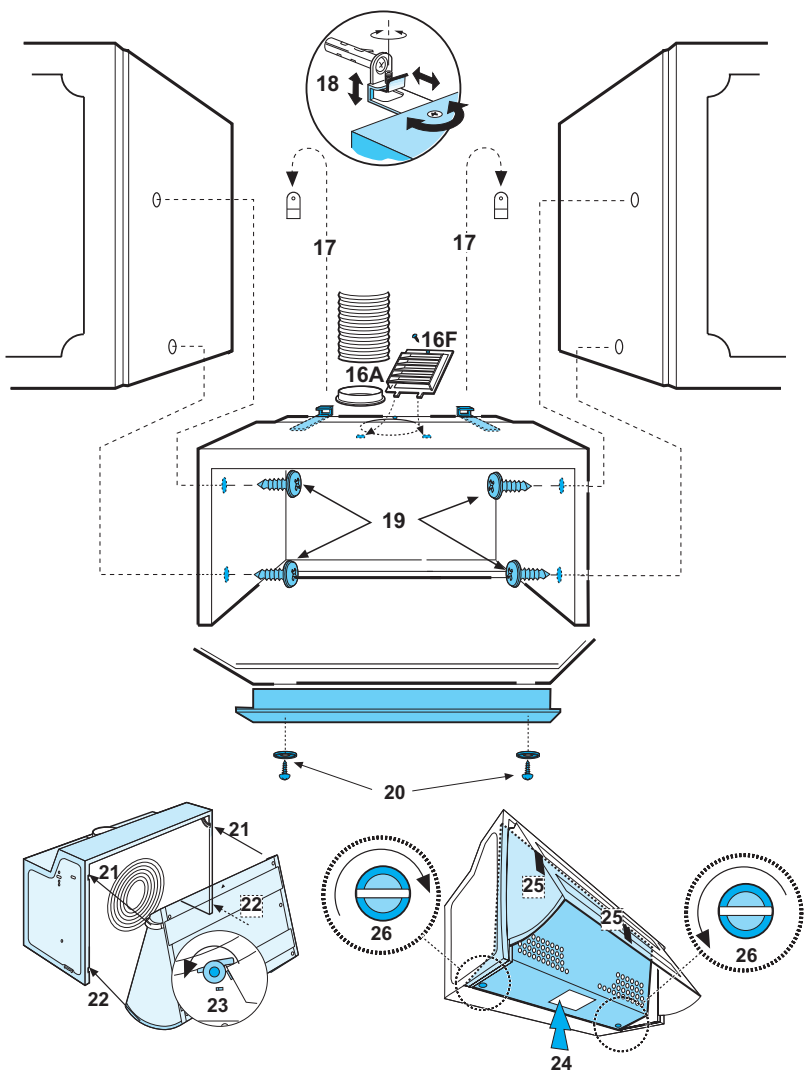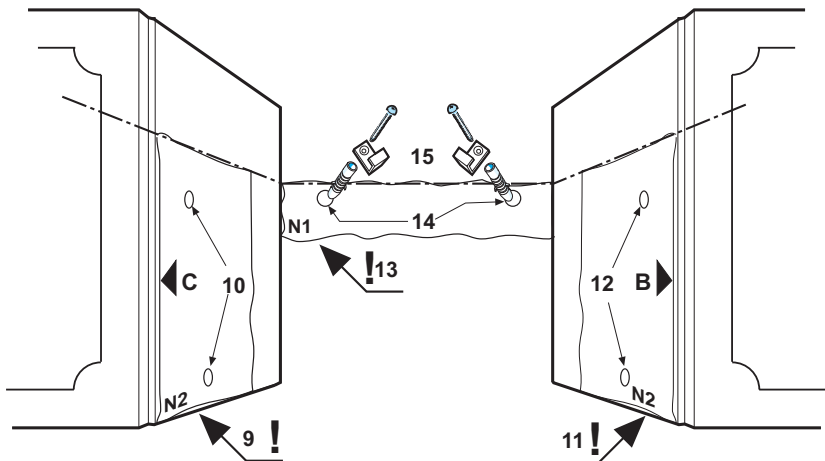

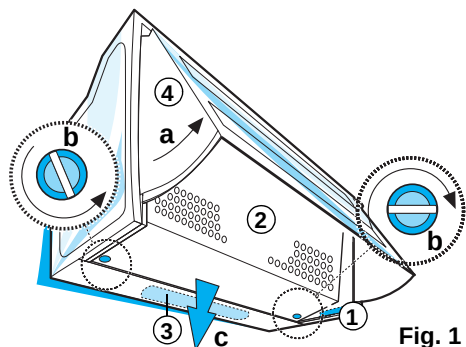

1. Control panel.
2. Grease filters (behind the extractor grille).
3. Lighting unit.
4. Pull-out steam deflector.

MAINTENANCE...

(refer also to "USER INSTRUCTIONS" manual).

1. Unplug the appliance or switch off the mains power supply.
2. Pull out the steam deflector (a - Fig. 1).
3. Open the extractor grille (b, c - Fig. 1).

... of the grease filter:

4. Remove the grease filter fixing device (d - Fig. 3).
5. Remove the dirty grease filter. After replacing or cleaning the grease filter (according to the model) remount in reverse order, making sure the entire extraction surface is covered.

... of the carbon filter (Fig. 4):


4. **Mounting:** fit the carbon filter over the motor protection grille. Line up the plastic reference tab (e - Fig. 4) on the carbon filter with the reference mark on the fan shroud (f - Fig. 4) and turn clockwise until it locks.
5. **Removing/replacing:** turn the carbon filter anticlockwise.

... of the bulb:

4. Remove the burnt-out bulb and fit a new one.
5. Use 40W max E14 bulbs only.

On completion of maintenance operations, remount the extractor grille!

CONTROL PANEL

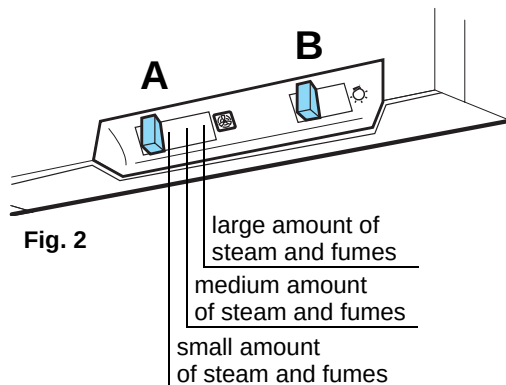

- A. Speed selector.
 B. Light switch.

With the speed selected, opening the steam deflector switches on the hood. Closing the steam deflector switches off the hood.

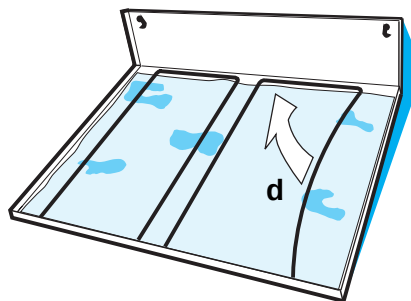


Fig. 3

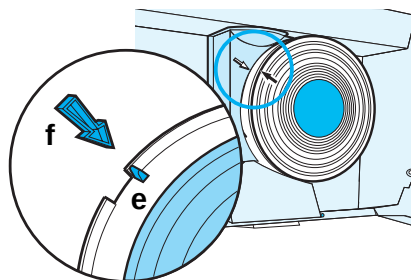


Fig. 4